

Broadband - Wireless Aolynk Quickstart Guide

1. Ensuring your cables are installed correctly.

In order to separate the voice and broadband services on your phone line you must install a DSL splitter. Hook this up as follows:

A. Plug the cable connected to the wall phone socket into the port labelled "Line" on your DSL splitter.

B. Plug one of the supplied telephone cables into the port labelled "Phone" on your DSL splitter. Plug the other end into your phone.

C. Plug one of the supplied telephone cables into the port labelled "Modem" on your DSL splitter. Plug the other end into the port labelled "ADSL" on your DSL modem.

2. Making sure your phone service is working.

Test your new phone number (as listed in your welcome pack) by calling it from a mobile phone or another phone line. If this does not work, try calling your old phone number to check if service has been switched over to smart yet.

3. Installing your Aolynk DSL modem.

You can connect your computer to your DSL modem using an Ethernet port, a USB port or a wireless interface. First ensure that your computer is powered up and your DSL modem is plugged and its green power light is on.

We recommend that you first complete setup based on an Ethernet or USB connection before attempting to setup wireless access. Also, if you have both an Ethernet and USB port, use your Ethernet port. Please read the document on securing your wireless network once you have set it up.

Ethernet

Plug one end of the supplied Ethernet cable into the port labelled "1" on the DSL Modem. Plug the other end into an Ethernet port on your computer. The light labelled "1" on the front of your modem should now be green.

USB

Insert the CD that came with your DSL modem into your computer's CD drive. Plug one end of the supplied USB cable into the port labelled "USB" on your DSL modem. Plug the other end into a USB port on your computer. If prompted to install software for a "USB remote network adapter" click "next", "continue" and "finish" when prompted.

Wireless

Go to "Start" -> "Settings" -> "Network Connections" and right-click on "Wireless Network

Connection" and select "View Available Wireless Networks". Select the network called "WDR814g". If present, select "Allow me to connect to the selected wireless network, even though it is not secure", and then click "Connect".

4. Configuring your AoLynk DSL modem.

Start Internet Explorer on your computer, type "http://192.168.1.1/" into the "Address" box and hit "Enter" on your keyboard. When prompted for a username and password enter "admin" for both and click "OK".

Click "WAN Setup", choose "PPPoE" as the "Internet Connection Type". Under "PPPoE Settings", type "SmartBB" in "Service Name". Enter the username in your welcome pack into the "Username" field. Enter the password in your welcome pack into both the "Password" field. Under "VC Setting", disable "AutoDetect" and change "VPI" to "8" and "VCI" to "35".

Click "Save Settings" and "Continue".